

BIOZONE SCIENTIFIC ICEZONE™

INSTALLATION MANUAL

Top Mounted Ice Storage Bins

When correctly installed and properly used, the Biozone Icezone device helps to keep ice machines clean, greatly enhancing their functionality and improving the cleanliness of the ice.

- Biozone Icezone significantly diminishes the presence of microbes, mold spores, yeast and other organic growths on the surfaces and in the air inside the ice machine.
- Biozone Icezone is the result of extensive research and sustained product development. Indeed, Biozone Scientific International Inc. has more than a decade of experience in designing and manufacturing its products.
- Biozone Icezone is highly effective and safe to use. Certificates issued to this effect are listed in the Certifications section of this manual.
- Every Icezone unit has undergone a strict quality-control regime. However, should the unit malfunction, follow the instructions in the **Troubleshooting** section of this manual. If the problem persists, please contact your local supplier.
- Biozone products are designed to be user-friendly with a high degree of functionality, ease of operation and simple installation the primary considerations. User feedback is important for the continuous development of our products. We value your opinion and would greatly appreciate your feedback at: info@bsg-uv.com
- For more information, visit our home page at www.Biozonescientific.com and explore our other air and ventilation products!

Biozone technology

Icezone efficiently disperses Photoplasma™ near the water outlet of the ice machine. As water sprays the cuber, convection spreads the Photoplasma™ throughout the machine. Photoplasma™ treats both the cuber and the bottom of the machine, reaching the storage bin where it is recirculated. This closed-loop system ensures continuous production and recirculation of Photoplasma, preventing the formation of mould, slime, and biofilm. The outcome? Crystal-clean ice produced by a hygienic ice machine. Icezone stands as the most effective solution for ensuring impeccable ice hygiene. It minimizes the need for costly manual cleaning, delivering an impressive return on investment without relying on harsh chemicals, excessive water, or harmful by-products.

Warranty

Please see the attached warranty card, if included, or contact your local distributor. The provisions of this warranty are in lieu of any other written warranty, whether expressed or implied, written or oral, including any warranty of merchantability or fitness for a particular purpose. The manufacturer's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall the manufacturer be liable for special, incidental, consequential or indirect damages. This warranty does not cover a defect that resulted from improper or unreasonable use or maintenance, accident, improper packing, or unauthorized tampering, alteration or modification as determined solely by us. This warranty is void if the label bearing the serial number has been removed or defaced.

Safety Instructions

Proper Use

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children are not allowed to use or play with this appliance and should be supervised to ensure this.
- If there is reason to suspect that the unit has been damaged, do not connect power or attempt to use it.
- Use only spare parts approved by Biozone Scientific International.
- Disconnect the device from the power-supply network before cleaning or servicing.
- Installation and maintenance must be carried out by a maintenance mechanic or appropriately qualified person only.
- The Icezone Product is intended for installation outside of the ice making area (This is considered the food zone). Do not install the Icezone inside the ice bin or ice production areas of the ice machine.

Unit Components (Figure AA.)

- A. Service Cover
- B. Service Cover Screw
- C. Lamp Connector
- D. Status Light
- E. Lamp Life Reset Port
- F. Lamp Seal
- G. Status Light Remote Connection
- H. Power Connection
- I. UV-Lamp
- J. Plasma Ports
- 1. K.12VDC 25W Power Adapter
- K. Mounting Screws / Rivets
- L. Plasma Distribution Tubing
- M. Plasma Distribution Fittings

Before installation

- Check that the aforementioned components are included in the package (some are inside the device). In the event that something is missing, contact your supplier.
- Inspect the device for damage that may have occurred during transportation. If the unit has been damaged, do not connect it to the power supply. In the event of damage, immediately inform the dispatcher or retailer.
- Check whether the manufacturer of the ice-machine has verified the compatibility of the ice-machine with Icezone and recommended a suitable location for the Icezone unit. If so, comply fully with the manufacturer's instructions.
- Only a maintenance mechanic or appropriately qualified person may install the Icezone.
- The installation may not be carried out in such a way that it damages electronic components, ice-machine components or wiring. Furthermore, installation must not require any modification to or re-positioning of ice-machine components.
- This installation instruction including the positioning of the plasma ports and use of NSF approved materials must be followed carefully to preserve the NSF compliance of the ice machine. The intention is to maintain the integrity of the ice machine's boundary between the food zone and mechanical section by using sealed fittings whenever the plumbing must pass through this boundary.

ATTENTION: Before installation, disconnect the ice-machine from the power supply.

Installation Instructions

Step 1

- To achieve maximum efficiency, the correct placement of the Icezone is very important.
It is recommended that it be mounted on top of the ice-machine or bin.
- The optimal place to introduce the plasma depends on the make and model of the ice-machine or bin. **This manual describes the installation for Top Mounted Ice Storage Bins only. Ice Storage Bins that fit this category are listed in Appendix A. Please request an Ice machine specific manual if you are installing Icezone on another type of ice machine or bin. These machine specific instructions are also available on our website:**
- Before installation, make sure that the power cord is within easy reach of a power outlet.
- To prevent contamination of the ice in the ice bin, it is recommended to remove the ice from the bin area while doing the installation of the Icezone.

ATTENTION: Do not connect the power adapter to the mains supply at this stage!

Step 2

- Remove the ice bin top cover.
- Typically the Icezone Plasma Outlet Tube and Plasma Return Tube are located to allow the plasma to flow across the volume to be treated. Locate the place where one 15/16" (23mm) hole will pass through the bin cover above the ice storage volume and a location for a second 15/16" (23mm) port at the opposite side of the cover above the bin area as shown in **Figure A**.
- Drill the 15/16" (23mm) holes for the bulkhead fittings.
- Install the bulkhead fittings according to **Figure B**.
- Clean the drilling debris from the ice bin and cover.

Step 3

- Choose to mount the Icezone on the wall adjacent to the ice bin or on top of the ice bin.
- **For Ice Bin Top Mounting:** Mark the location on the ice machine top cover for the 7/32" (5.5mm) holes for the Icezone plastic mounting rivets. Use the included paper template to place the Icezone where the mounting holes and fasteners will not interfere with Ice Bin walls or components.
- Remove the cover from the ice bin and drill the 7/32" (5.5mm) holes to mount the Icezone. See **Figure C**.
- **Alternative – Wall Mounting:** Mount the Icezone on a wall adjacent to the ice machine using the included wall anchors and #8 Screws.

Step 4

- Arrange the hoses and fitting on the bin cover and connect to the Icezone output and return tubes as shown in **Figure D**.
- Remove the Icezone service cover and insert the power-supply cord through the Service Cover slot and into the DC power socket. **Figure 4**.
- Place the Service Cover over the end of the Icezone and install the cover screw.
- Plug the Icezone power adapter into the wall and observe the status light on top of the Icezone.

Step 5

- The Status Light should show a blue circle indicating normal operation. The Icezone is now operating and keeping your ice machine clean! (**Figure 9**)

Attention: Remember to reconnect power to the ice-machine

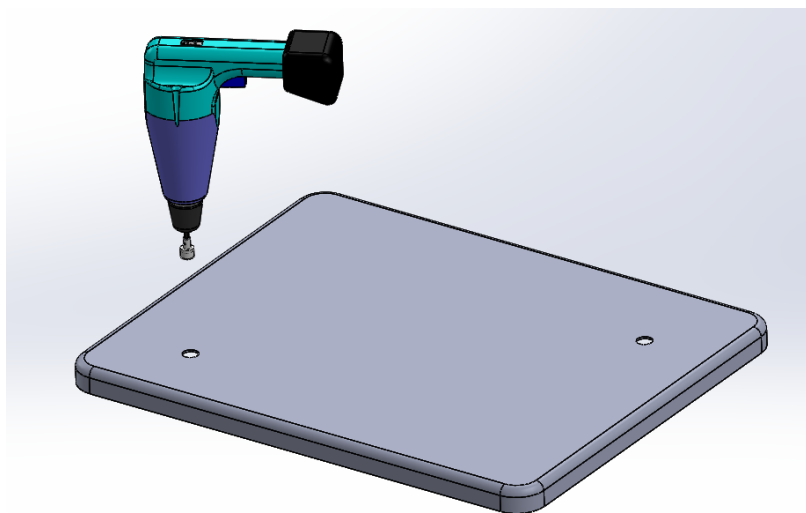


Figure A.

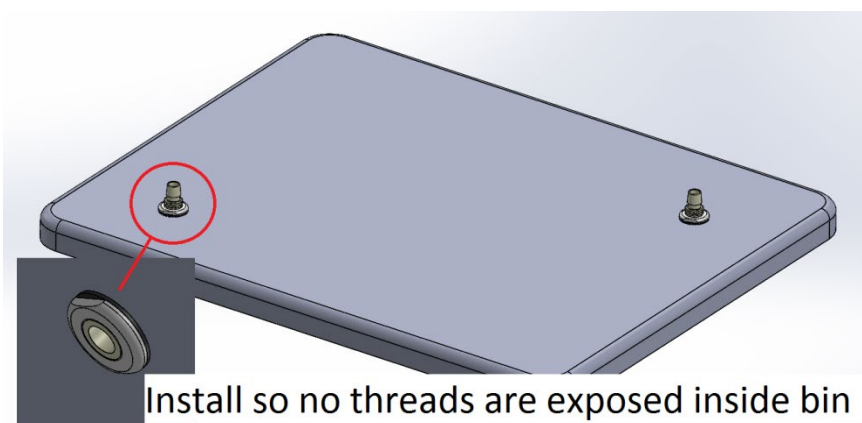


Figure B.

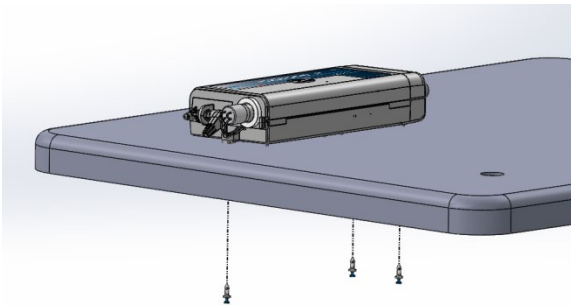
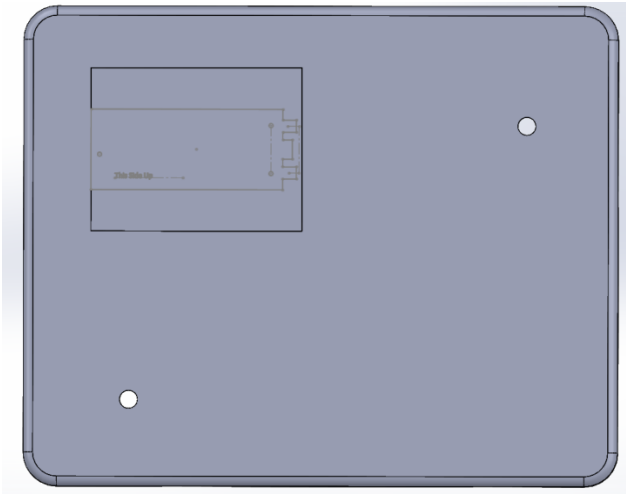


Figure C.

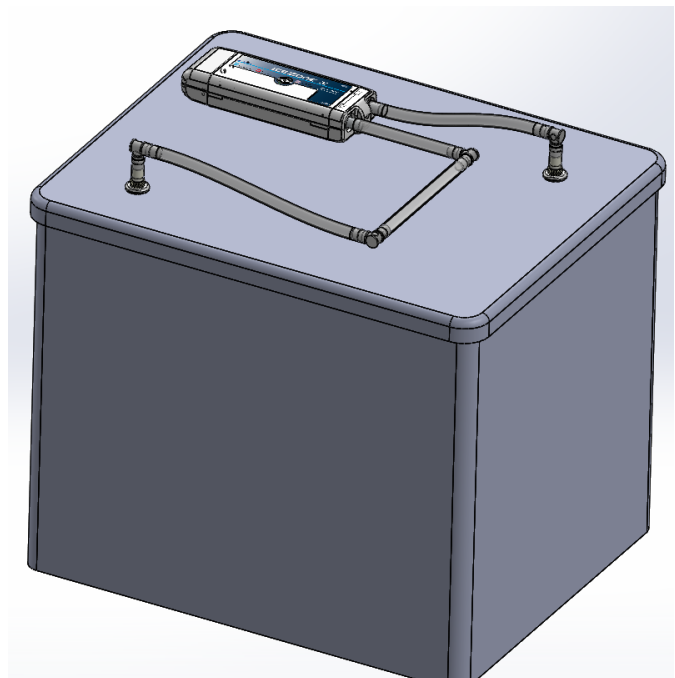


Figure D.

Maintenance instructions

- If the device is located in a dusty or smoke-filled area, it is recommended that the lamp be cleaned every three months. This will significantly improve the effectiveness of the lamp.
- The lamp must be changed once a year in order to ensure maximum functionality and efficiency.

Status Light (Figure 9)

- **Steady Blue – Operation is Normal**
- **Steady Red – Replace Lamp**
- **Flashing Red – Service Required**

Cleaning and changing the lamp

Cleaning (Figure 8)

- Disconnect the power supply to the device
- Open the Service Cover in accordance with the installation instructions in this manual
- Ensure that the lamp has cooled down (5 minutes). Unplug the lamp connector and extract the lamp from the Lamp Seal.
- When handling the lamp, avoid touching the glass element with exposed fingers.
- Cleaning the lamp: Clean the lamp with a soft cloth and isopropyl alcohol
- Reinsert the lamp.

Changing (Figures 7 & 8)

- Disconnect the power supply to the device
- Open the Service Cover in accordance with the installation instructions in this manual
- Ensure that the lamp has cooled down. Unplug the lamp connector and extract the lamp from the Lamp Seal.
- Discard the old lamp according to local hazardous disposal regulations. The lamp contains a small amount of mercury.
- Insert a new lamp (see **Figure 5** in this manual for correct lamp type).
- Use only a new Biozone Scientific International lamp (using other lamps will void the warranty will not function properly due to incompatibility with the on-board electronics.)
- Close the Service Cover in accordance with the installation instructions in this manual.
- Connect the power adapter to the wall outlet

Troubleshooting

In the event that the following instructions do not solve the problem, contact your supplier.

Trouble	Check
Fan works Status Light – Steady Red	Open the Icezone Service Cover and check that the lamp connectors are properly installed. Replace lamp.
Fan works Status Light – Flashing Red	Lamp Time Expired – Replace Lamp to Maintain Effective Ice Machine Cleaning. Reset Lamp Timer After Installing New Lamp
Fan not working Status Light not lit	Power supply plugged in. Power outlet is working. Power cord is undamaged.
Weak airflow	Clean Lamp Blocked Hose or Fittings

Disposal and Recycling

Packaging:

- Packing materials can be recycled. In the interest of environmental protection, dispose of them properly.

Photoplasma Lamp

- Lamps contain small traces of mercury. Old, defective or broken lamps must be disposed of in accordance with laws related to the disposal of hazardous wastes.







Certifications

This device complies with:


NSF 169, UL 507, UL935, and Part 15 of the FCC Rules.



Illustrations:

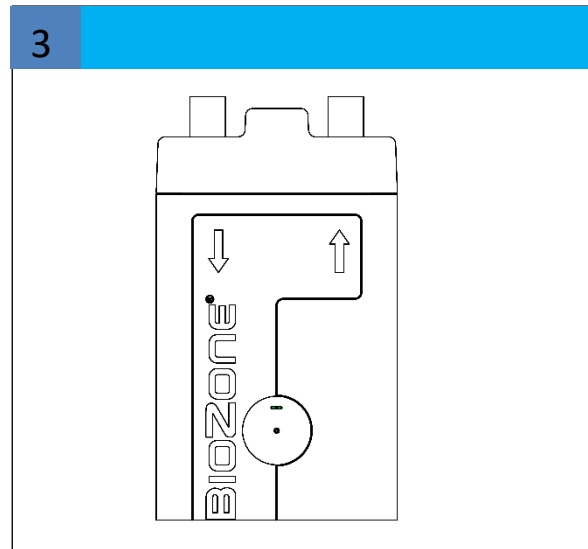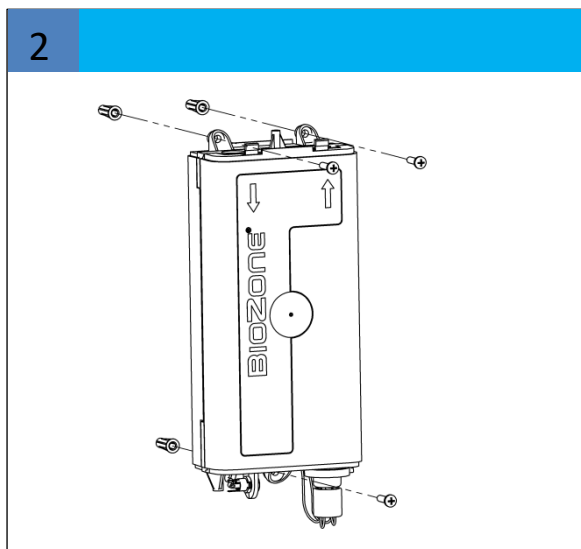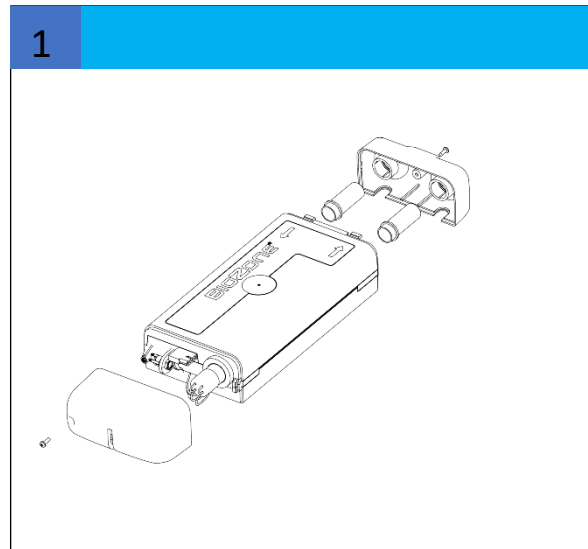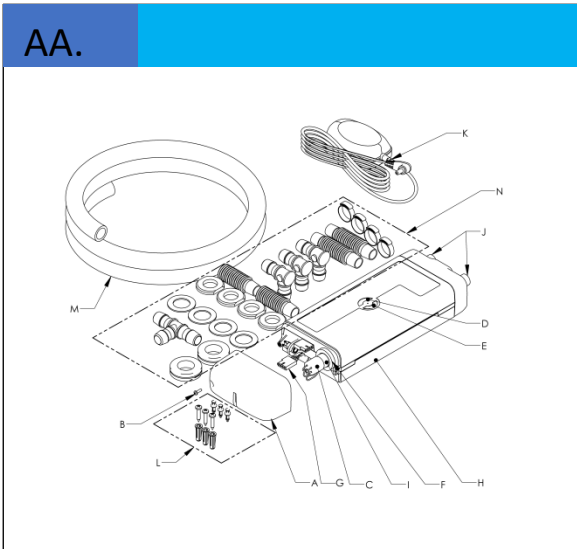

4

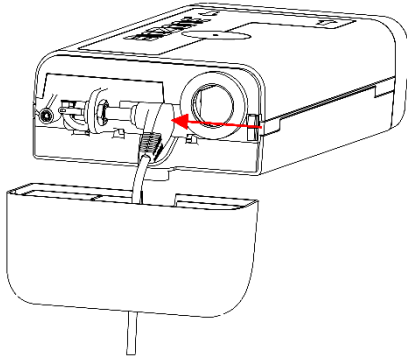


5


IceZone X
Model No. Lamp Part No.

IZ-X05	10-08010
IZ-X10	10-08025
IZ-X20	10-08050
IZ-X30	10-08100


6

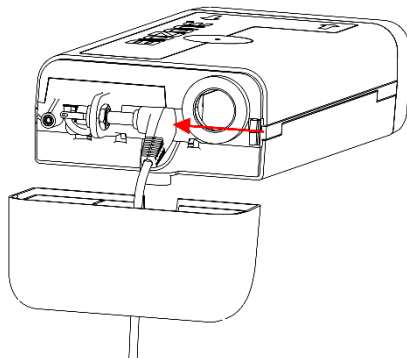

7

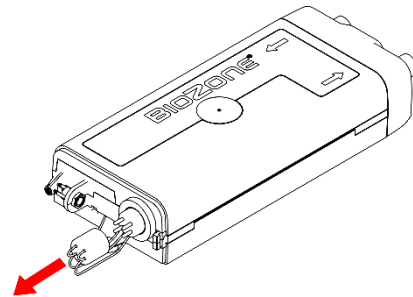

8

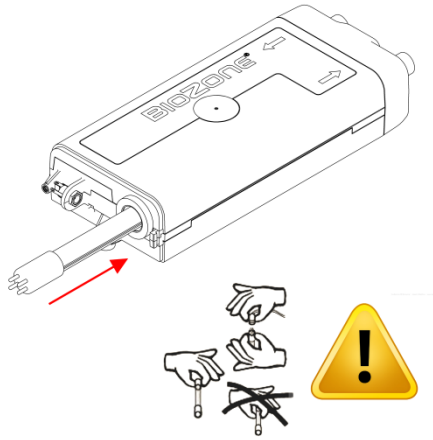

9



NORMAL



LAMP REPLACE
(RED)



SERVICE
(FLASHING)